

Running keys	S&P Keys
<p>CQ: F1 Send call and report: ; or insert Send TU message and enter in log: '</p> <p>Enable CQ repeat: Alt+R Set repeat time : Ctrl+R</p> <p>Stop sending, stop repeat: Esc</p>	<p>Call CQ and switch to run: Shift+F1 Toggle S&P/Run. Set CQ-frequency for pass: Alt+U</p> <p>Return to CQ-frequency: Alt+Q</p> <p>Next qso from bandmap: Ctrl+Up/Dn arrow Next mult from bandmap: Alt+Ctrl+Up/Dn arrow</p>
General keys	DX Spots and Band Map
<p>Set operator call: Ctrl+O (or OPON in Callsign field) Add note to log: Ctrl+N</p> <p>Wipe entry fields: Ctrl+W or Alt+W (Releases a reserved serial number)</p> <p>Move between logging fields: SPACE or Tab Log it: Enter (see ESM mode)</p> <p>Quick edit previous or next call: Ctrl+Q/A Delete last qso: Ctrl+D</p> <p>Show help: Alt+H Edit message buttons: Alt+K Log a not accepted 'invalid' qso: Alt+Ctrl+Enter</p>	<p>Zoom in/out bandmap: Mouse wheel Zoom in/out bandmap: Keypad +/- Remove spot: Alt+D</p> <p>Send spot: Alt+P Send spot with comment: Ctrl+P Toggle to/from packet window: Ctrl+Tab</p> <p>Store contact in the Bandmap: Alt+O</p> <p>Jumps to the CQ frequency on this band: Alt+Q</p>
Radio control	ESM Mode
<p>Swap VFOs: Alt-F10 Return to CQ frequency: Alt+Q Return to last frequency: Alt+F8</p> <p>Up/Down a band: Ctrl+PgUp/PgDn Change mode: Type CW/USB/LSB/RTTY</p> <p>Set radio into split: Ctrl+S Toggle split mode: Ctrl-Alt-S Set split frequency: Ctrl+Enter Set split or offset to specified frequency: Alt+F7</p> <p>Toggle between the wide and narrow filters: Alt+'</p>	<p>Turn on/off: Ctrl+M Send call and exchange: Insert or ; Send TU and log it: Enter Start CQ again...Enter Log without sending anything: Alt+Enter</p> <p style="text-align: center;">Multi-User Mode</p> <p>Set pass frequency (sent to all computers): Alt+Z</p>

SO2R	Specific radios / Rotor control
<p>Change Receive (RX) focus: Backslash (\) Swap both Transmit and Receive/Keyboard focus: Pause</p> <p>Send next ESM state on alternate radio: Ctrl+Enter</p> <p>Send message on alternate radio: Ctrl+F1 to F12 Dueling CQ's: Ctrl+B Toggle Stereo/Mono (LPT pin 5): ` (Back-quote) . Toggle through SO2R supported modes (\$S5SO2R): Ctrl+I</p>	<p>FT-1000MP/FT1000D + IC-756 series + IC7800 Dual Receive toggle: Alt+F12</p> <p>TenTec Orion Toggle Main/left Sub/Right and Active in both ears: Alt+F12</p> <p>Rotor control for the callsign in the Entry window. Turn rotor to bearing: Alt+J Turn rotor to long path bearing: Alt+L Stop turning the rotor: Ctrl+Alt+J</p>

<div data-bbox="191 800 784 856" style="background-color: cyan; text-align: center; padding: 2px;">CW</div> <div data-bbox="191 856 784 1060" style="padding: 2px;"> <p>speed up: Page Up speed down: Page Down send last F-key again: = CW send window: Ctrl+K Stop sending: Esc</p> </div>	<div data-bbox="930 800 1474 856" style="background-color: yellow; text-align: center; padding: 2px;">SSB</div> <div data-bbox="930 856 1474 1102" style="padding: 2px;"> <p>Record CQ: Ctrl+Shift+F1</p> <p>Record F-key message: Ctrl+Shift+F# **Same keys again to stop recording**</p> </div>
<div data-bbox="191 1115 784 1171" style="background-color: cyan; text-align: center; padding: 2px;">RTTY</div> <div data-bbox="191 1171 784 1411" style="padding: 2px;"> <p>Grab call from stack: Alt+G RX/TX toggle: Alt+T Swaps DI: Ctrl+Arrows Stop sending: Esc</p> </div>	<div data-bbox="930 1150 1474 1207" style="background-color: yellow; text-align: center; padding: 2px;">VHF</div> <div data-bbox="930 1207 1474 1411" style="padding: 2px;"> <p>Search entered info: Alt+= Toggle grids: Alt+minus Send message to stations: Ctrl+E Set pass frequency: Alt+Z</p> </div>