

Loading WINLINK EXPRESS and Getting New Users Going

Jan 30 2022

ARRL National Convention

Emergency Communications Academy

SHELTER-A: This open (non-encrypted, no password) WIFI server based on a raspberry pi will be available with multiple software packages and downloadable knowledge and instructions. Find it in your list of "available networks" and connect to if you are not able to find sufficiently speedy real live internet sources. It sometimes takes a moment or two to "connect" but runs at 10 megabit WIFI so reasonably speedy.

The server is a project we created to be able to make information readily available inside a storm shelter cut off from normal internet. The hardware looks like the photo below, and information is available at:

Shelter WIFI Servicer

[Shelter WIFI Service - Introduction](#)

Significantly improved technical document: (Feb 25 2021):

[Rasp3BPlusOrRasp4TechnicalServerDocument](#)



Once connected, type in the URL Internet address **10.10.10.10** and you should get a page similar to this:

SHELTER INFORMATION SYSTEM



ARRL 2022 NATIONAL CONVENTION
EMERGENCY COMMUNICATIONS ACADEMY
WINLINK INSTALLATION FILES
[WINLINK-6-0-0.ZIP](#)
(NOTE: Base winlink installation includes ARDOP but not VARA)
[VARA HF INSTALLATION FILES\(4.5.5\)](#)

DOT NET FILES TO USE IF YOU MUST INSTALL THEM
(OFFLINE INSTALLERS FROM MICROSOFT, BUT UNTESTED)
[DOTNET3.5\(231MBytes\)](#)
[DOTNET4.8\(115MBytes\)](#)

[Official Information from Local EOC](#)
(if loaded at their direction)

[Amateur Radio Information](#)


This WIFI shelter system is accessible by connecting your cell phone to the wifi server, and entering

10.10.10.10

in the URL bar of your browser. This is provided as a free public service.

- This will enable you to download WINLINK EXPRESS and VARA HF as zipped files.
- Download these to the download directory of your participant's computer, "extract all" into locations that you can find.
- Execute the installation procedures, accepting the default directories:
c:\RMS Express
c:\VARA
- DOT NET 4.6 (or later) is required by WINLINK EXPRESS.
- DOT NET 3.5 is additionally required for ARDOP (if your participant wants to be able to run this FREE hf protocol) We have zipped off-line installation files from Microsoft available on SHELTER-A for BOTH of these. We have not been able to test these. They are HUGE and make a while to install.


To see which DOT NETS are installed: (you may wish to check this before you begin installation)
Use SETTINGS and search "turn windows features on or off" to arrive at this dialog box:

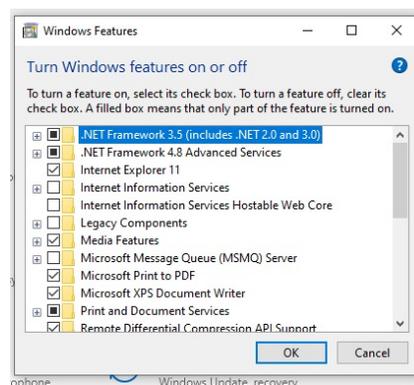

CONFIGURATION OF PARTICIPANT WINLINK ACCOUNT

Winlink accounts are created using Winlink Express. It will work far better if you have Internet access for installation. Please connect to one of the available hotspots or hotel wifi if possible to set up your participant's WINLINK account.

Accounts must be ACTIVELY USED about every year to stay active. Warn your user of this requirement. (They also check for valid licenses, and some other safety checks.)

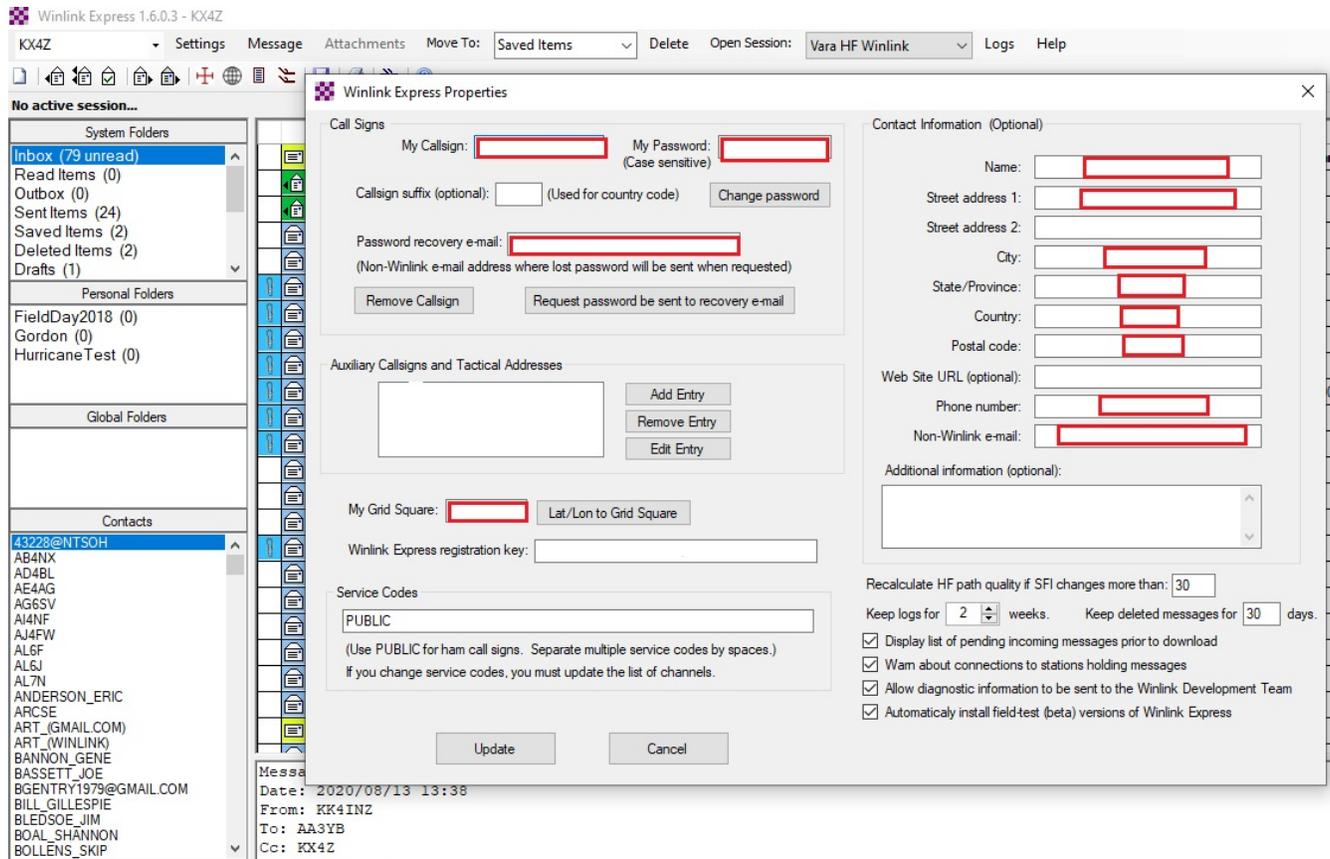

Assist your participant to enter all of the following items:

- Their valid call sign
- A password of THEIR CHOOSING -- It is VERY case sensitive, and they should write it down somewhere and not forget it if possible.
- A password recovery email address NOT ON WINLINK -- this is invaluable if they forget their password.

Their GRID SQUARE (Gainesville is EL89RQ) -- you can use any one you like, but getting it somewhere near their actual house will make the propagation predictions better....

Make sure the SERVICE CODE says PUBLIC

Enter as much personal contact information on the right hand side of the page that your participant is willing to provide.

CLICK UPDATE.

You will need to wait about 2 minutes before the account is active, and then you can help them to CREATE a message, and then send it in a TELNET SESSION.